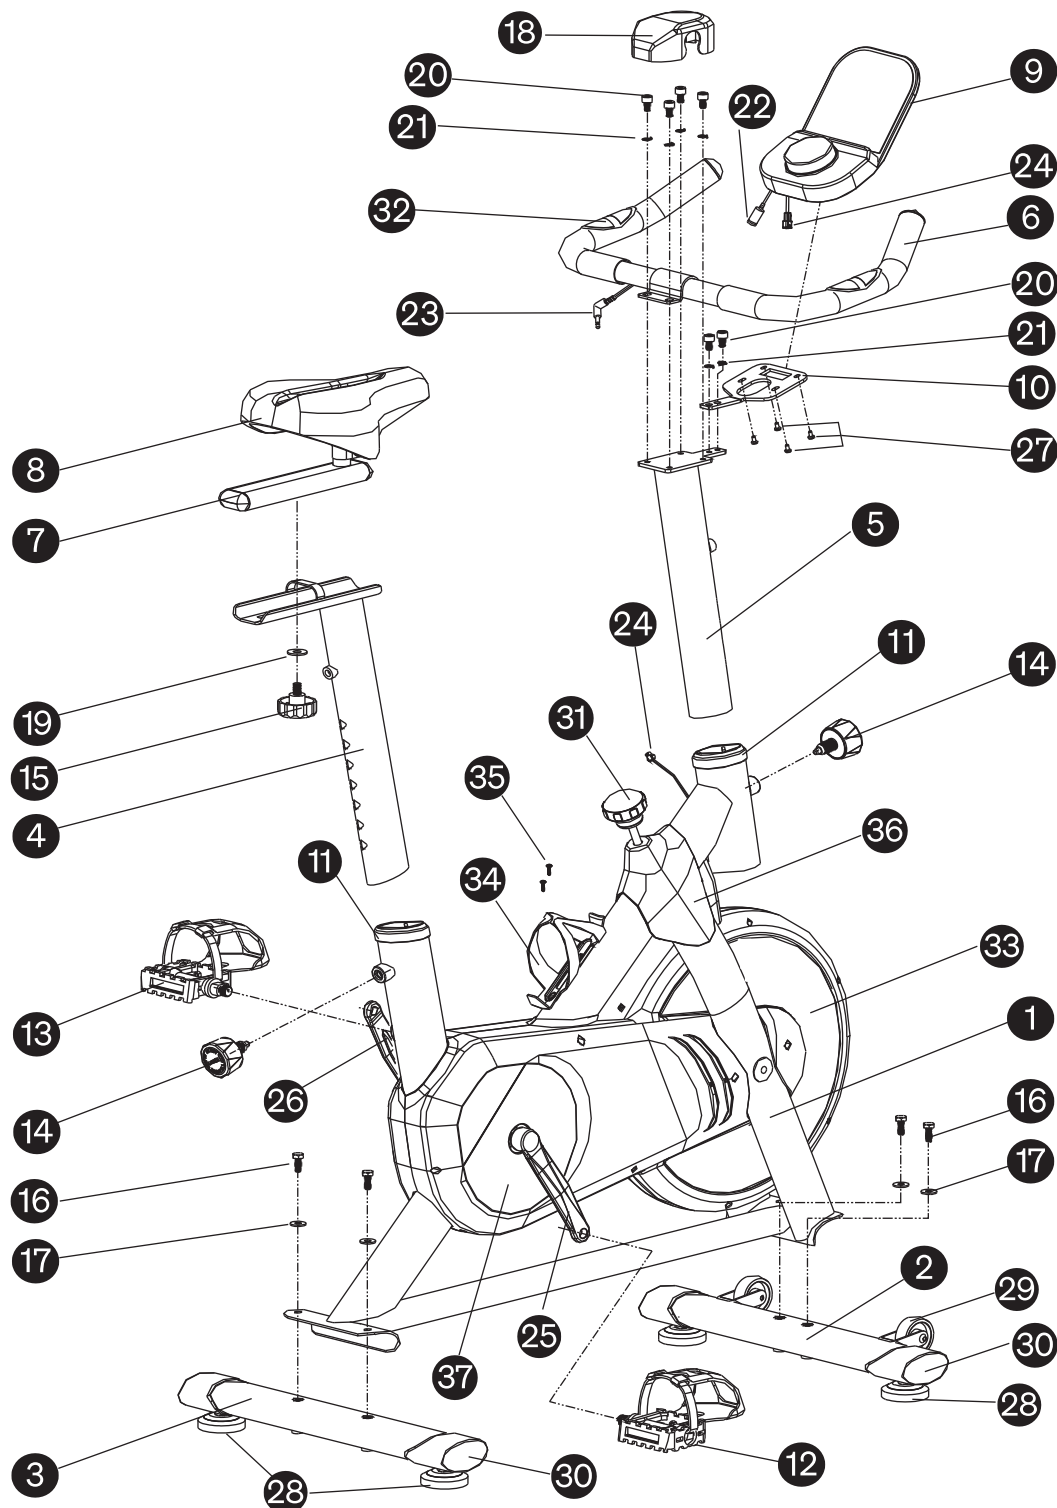


Indoor Cycle /
Speedbike

SX175

**EXPLOSION-DRAWING /
EXPLOSIONSZEICHNUNG**

Indoor Cycle /
Speedbike**SX175**

No. in explosion drawing	Item No.	Description
1	SP_SX175_01	Main frame
2	SP_SX175_02	Front stabilizer
3	SP_SX175_03	Rear stabilizer
4	SP_SX175_04	Seat post
5	SP_SX175_05	Handlebar post
6	SP_SX175_06	Handlebar frame
7	SP_SX175_07	Seat rail
8	SP_SX175_08	Seat
9	SP_SX175_09	Monitor
10	SP_SX175_10	Monitor support
11	SP_SX175_11	Bushing
12	SP_SX175_12	Right pedal
13	SP_SX175_13	Left pedal
14	SP_SX175_14	Adjustment knob
15	SP_SX175_15	Locking knob
16	SP_SX175_16	Hex bolt M8×20
17	SP_SX175_17	Flat washer 8mm
18	SP_SX175_18	Handlebar cap
19	SP_SX175_19	Flat washer 10mm
20	SP_SX175_20	Cylindrical head screw M5×12
21	SP_SX175_21	Spring washer 8.5mm
22	SP_SX175_22	Pulse wire -1
23	SP_SX175_23	Pulse wire -2
24	SP_SX175_24	Signal wire
25	SP_SX175_25	Right crank
26	SP_SX175_26	Left crank
27	SP_SX175_27	Rounded head screw M5×12
28	SP_SX175_28	Leveling foot
29	SP_SX175_29	Transport wheels
30	SP_SX175_30	Tube cover
31	SP_SX175_31	Brake sensor
32	SP_SX175_32	Hand pulse support
33	SP_SX175_33	Wheel cover
34	SP_SX175_34	Bottle holder
35	SP_SX175_35	Self-tapping screw ST4.2×16
36	SP_SX175_36	Brake cover
37	SP_SX175_37	Belt cover

SPAREPARTS-OVERVIEW
/ ERSATZTEILLISTE