


EXPLOSION-DRAWING / SPAREPARTS-OVERVIEW

EXPLOSIONSZEICHNUNG / ERSATZTEILLISTE

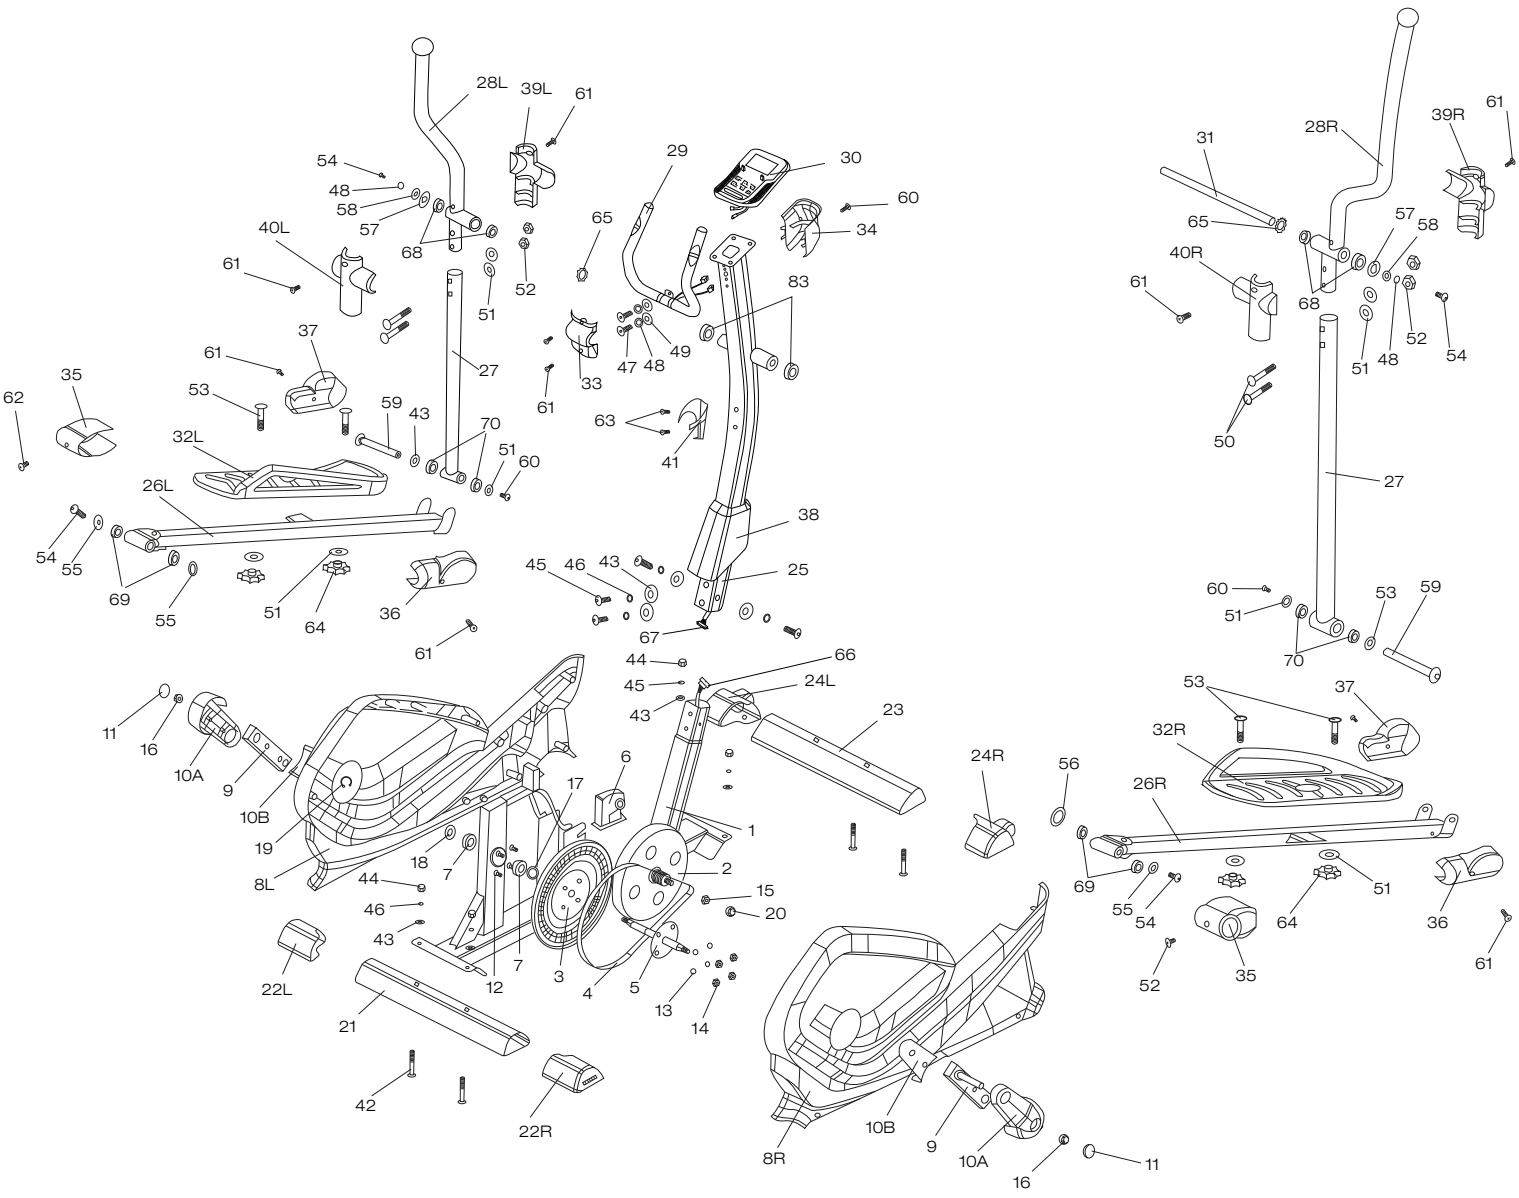

SPORTSTECH

CROSSTRAINER CX70

Number in explosion drawing	Item number	Description
1	SP_CX70_01	Main Frame
2	SP_CX70_02	Magnetic wheel
3	SP_CX70_03	Belt pulley
4	SP_CX70_04	Belt
5	SP_CX70_05	Axis
6	SP_CX70_06	Motor
7	SP_CX70_07	Bearing 6003DU
8	SP_CX70_08L	Left chain cover
8	SP_CX70_08R	Right chain cover
9	SP_CX70_09	Crank
10	SP_CX70_10A	Foot ACTS the role of cover
10	SP_CX70_10B	Foot ACTS the role of cover
11	SP_CX70_11	Crank plug
12	SP_CX70_12	Screw M8x15
13	SP_CX70_13	Spring washer D8
14	SP_CX70_14	Nut M8
15	SP_CX70_15	Nut M10
16	SP_CX70_16	Flange nut M10
17	SP_CX70_17	Washer 17x22x3
18	SP_CX70_18	Washer 17x22x2
19	SP_CX70_19	Jump ring D 17
20	SP_CX70_20	Flange nut M10
21	SP_CX70_21	Hind feet tube
22	SP_CX70_22L	Left hind feet pipe sleeve
22	SP_CX70_22R	Right hind feet pipe sleeve
23	SP_CX70_23	Front foot tube
24	SP_CX70_24L	Left foot pipe sleeve
24	SP_CX70_24R	Right foot pipe sleeve
25	SP_CX70_25	Upright frame
26	SP_CX70_26L	Left pedal frame
26	SP_CX70_26R	Right pedal frame
27	SP_CX70_27	Lower swing tube
28	SP_CX70_28L	Left upper swing tube
28	SP_CX70_28R	Right upper swing tube
29	SP_CX70_29	Handlebar
30	SP_CX70_30	Console
31	SP_CX70_31	Handrail axis
32	SP_CX70_32L	Left pedal
32	SP_CX70_32R	Right pedal
33	SP_CX70_33	Handlebar cover
34	SP_CX70_34	Handlebar cover
35	SP_CX70_35	Rear pedal frame cover
36	SP_CX70_36	Front pedal frame cover A
37	SP_CX70_37	Front pedal frame cover B
38	SP_CX70_38	Front cover
39	SP_CX70_39L	Left swing tube cover A
39	SP_CX70_39R	Right swing tube cover A
40	SP_CX70_40L	Left swing tube cover B

Number in explosion drawing	Item number	Description
40	SP_CX70_40R	Right swing tube cover B
41	SP_CX70_41	Bottle holder
42	SP_CX70_42	Carriage screw M10x70
43	SP_CX70_43	Washer D10
44	SP_CX70_44	Cup nut M10
45	SP_CX70_45	Screw M10x15
46	SP_CX70_46	Spring washer M10
47	SP_CX70_47	Screw M8x15
48	SP_CX70_48	Spring washer D8
49	SP_CX70_49	Washer D8
50	SP_CX70_50	Carriage screw M6x40
51	SP_CX70_51	Washer D6
52	SP_CX70_52	Nut M6
53	SP_CX70_53	Screw M6x50
54	SP_CX70_54	Screw M8x18
55	SP_CX70_55	Washer D8
56	SP_CX70_56	Corrugated washer D16x23x0.2
57	SP_CX70_57	Washer
58	SP_CX70_58	Washer D8
59	SP_CX70_59	Screw D10x65
60	SP_CX70_60	Screw M6x15
61	SP_CX70_61	Screw M5x15
62	SP_CX70_62	Screw M5x6
63	SP_CX70_63	Big crosshead screw M5x15
64	SP_CX70_64	Knob M6
65	SP_CX70_65	Washer D19.5x38x0.5
66	SP_CX70_66	Console wire top
67	SP_CX70_67	Console wire down
68	SP_CX70_68	Power bushing 1
69	SP_CX70_69	Power bushing 2
70	SP_CX70_70	Power bushing 3
83	SP_CX70_83	Power bushing 4
Not in drawing	SP_CX70_71	Sensor
Not in drawing	SP_CX70_72	Pulssensor
Not in drawing	SP_CX70_73	Swing tube cap
Not in drawing	SP_CX70_74	Screw for console
Not in drawing	SP_CX70_75	Screw for cover ST3x15
Not in drawing	SP_CX70_76	Screw for cover ST4x15
Not in drawing	SP_CX70_77	DC wire
Not in drawing	SP_CX70_78	Adapter
Not in drawing	SP_CX70_79	Corrugated washer D19x25x0.5
Not in drawing	SP_CX70_80	Socket head wrench 5,5,6
Not in drawing	SP_CX70_81	Cross wrench 13.14.17 19
Not in drawing	SP_CX70_82	Wrench 10,13
Not in drawing	SP_CX70_Carton	Carton
Not in drawing	SP_CX70_Manual	Manual
Not in drawing	SP_CX70_Screw set	Screw and tool set