


# Vibration Plate VP150

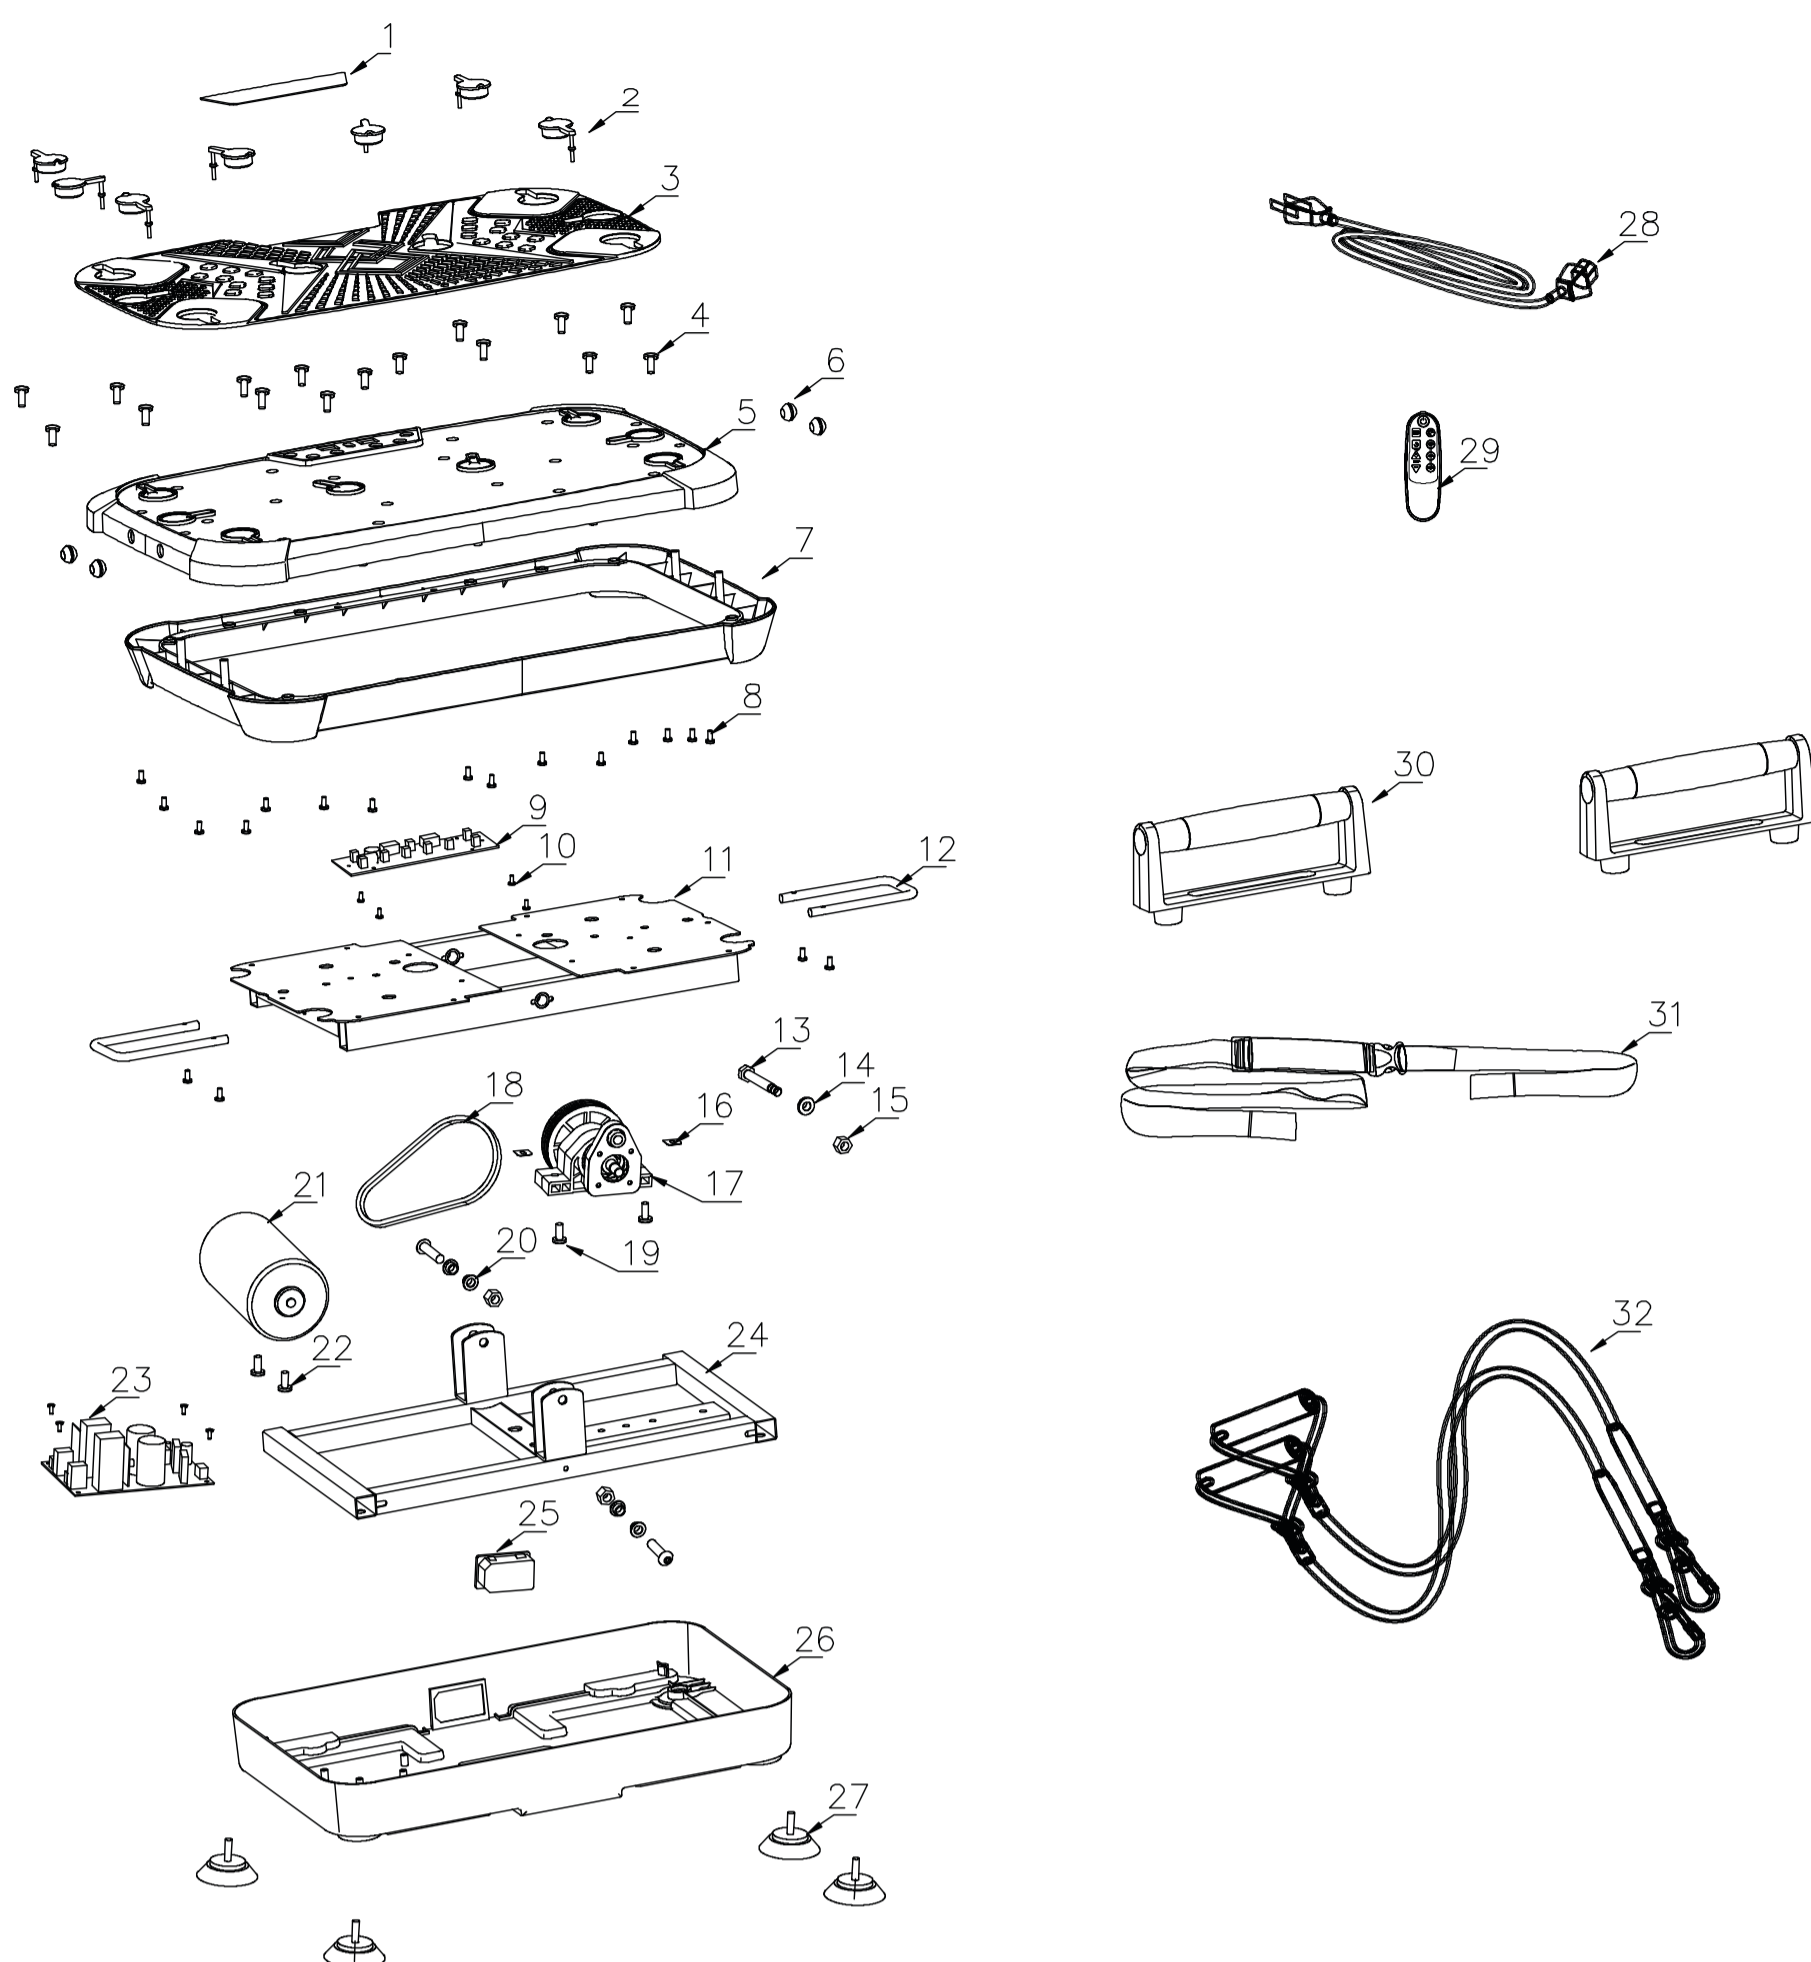

## EXPLOSION-DRAWING / SPAREPARTS-OVERVIEW EXPLOSIONSZEICHNUNG / ERSATZTEILLISTE

No. in explosion drawing	Item No.	Description
1	SP_VP150_01	Overlay
2	SP_VP150_02_BL	Mat cap for black device
2	SP_VP150_02_SL	Mat cap for silver device
3	SP_VP150_03_BL	Mat for black device
3	SP_VP150_03_SL	Mat for silver device
4	SP_VP150_04	Cross recessed countersunk head bolt M5x10
5	SP_VP150_05_BL	Upper cover for black device
5	SP_VP150_05_SL	Upper cover for silver device
6	SP_VP150_06	Wire grommet
7	SP_VP150_07_BL	Middle housing for black device
7	SP_VP150_07_SL	Middle housing for silver device
8	SP_VP150_08	Cross recessed truss head screw ST4x16
9	SP_VP150_09	Display board
10	SP_VP150_10	Cross recessed truss head screw ST3x10.
12	SP_VP150_12	Hook
13	SP_VP150_13	Hexagon socket round head cap bolt M8x40
14	SP_VP150_14	Washer Ø8
15	SP_VP150_15	Flange nut M8
16	SP_VP150_16	Bracket plate
17	SP_VP150_17	Driving shafting
18	SP_VP150_18	Motor belt
19	SP_VP150_19	Hexagon socket round head cap bolt M6x25
20	SP_VP150_20	Plastic bushing
21	SP_VP150_21	Motor
22	SP_VP150_22	Cross recessed countersunk head bolt M6x10
23	SP_VP150_23	Electric controller
25	SP_VP150_25	Power switch
26	SP_VP150_26	Base housing
27	SP_VP150_27	Foot pad
28	SP_VP150_28	Power cord
29	SP_VP150_29	Remote controller
30	SP_VP150_30_BL	Pushup bar for black device
30	SP_VP150_30_SL	Pushup bar for silver device
31	SP_VP150_31	Puls belt
32	SP_VP150_32	Resistance band
not in drawing	SP_VP150_Manual	Manual