SPORTSTECH

Laufbänder sWalk Plus

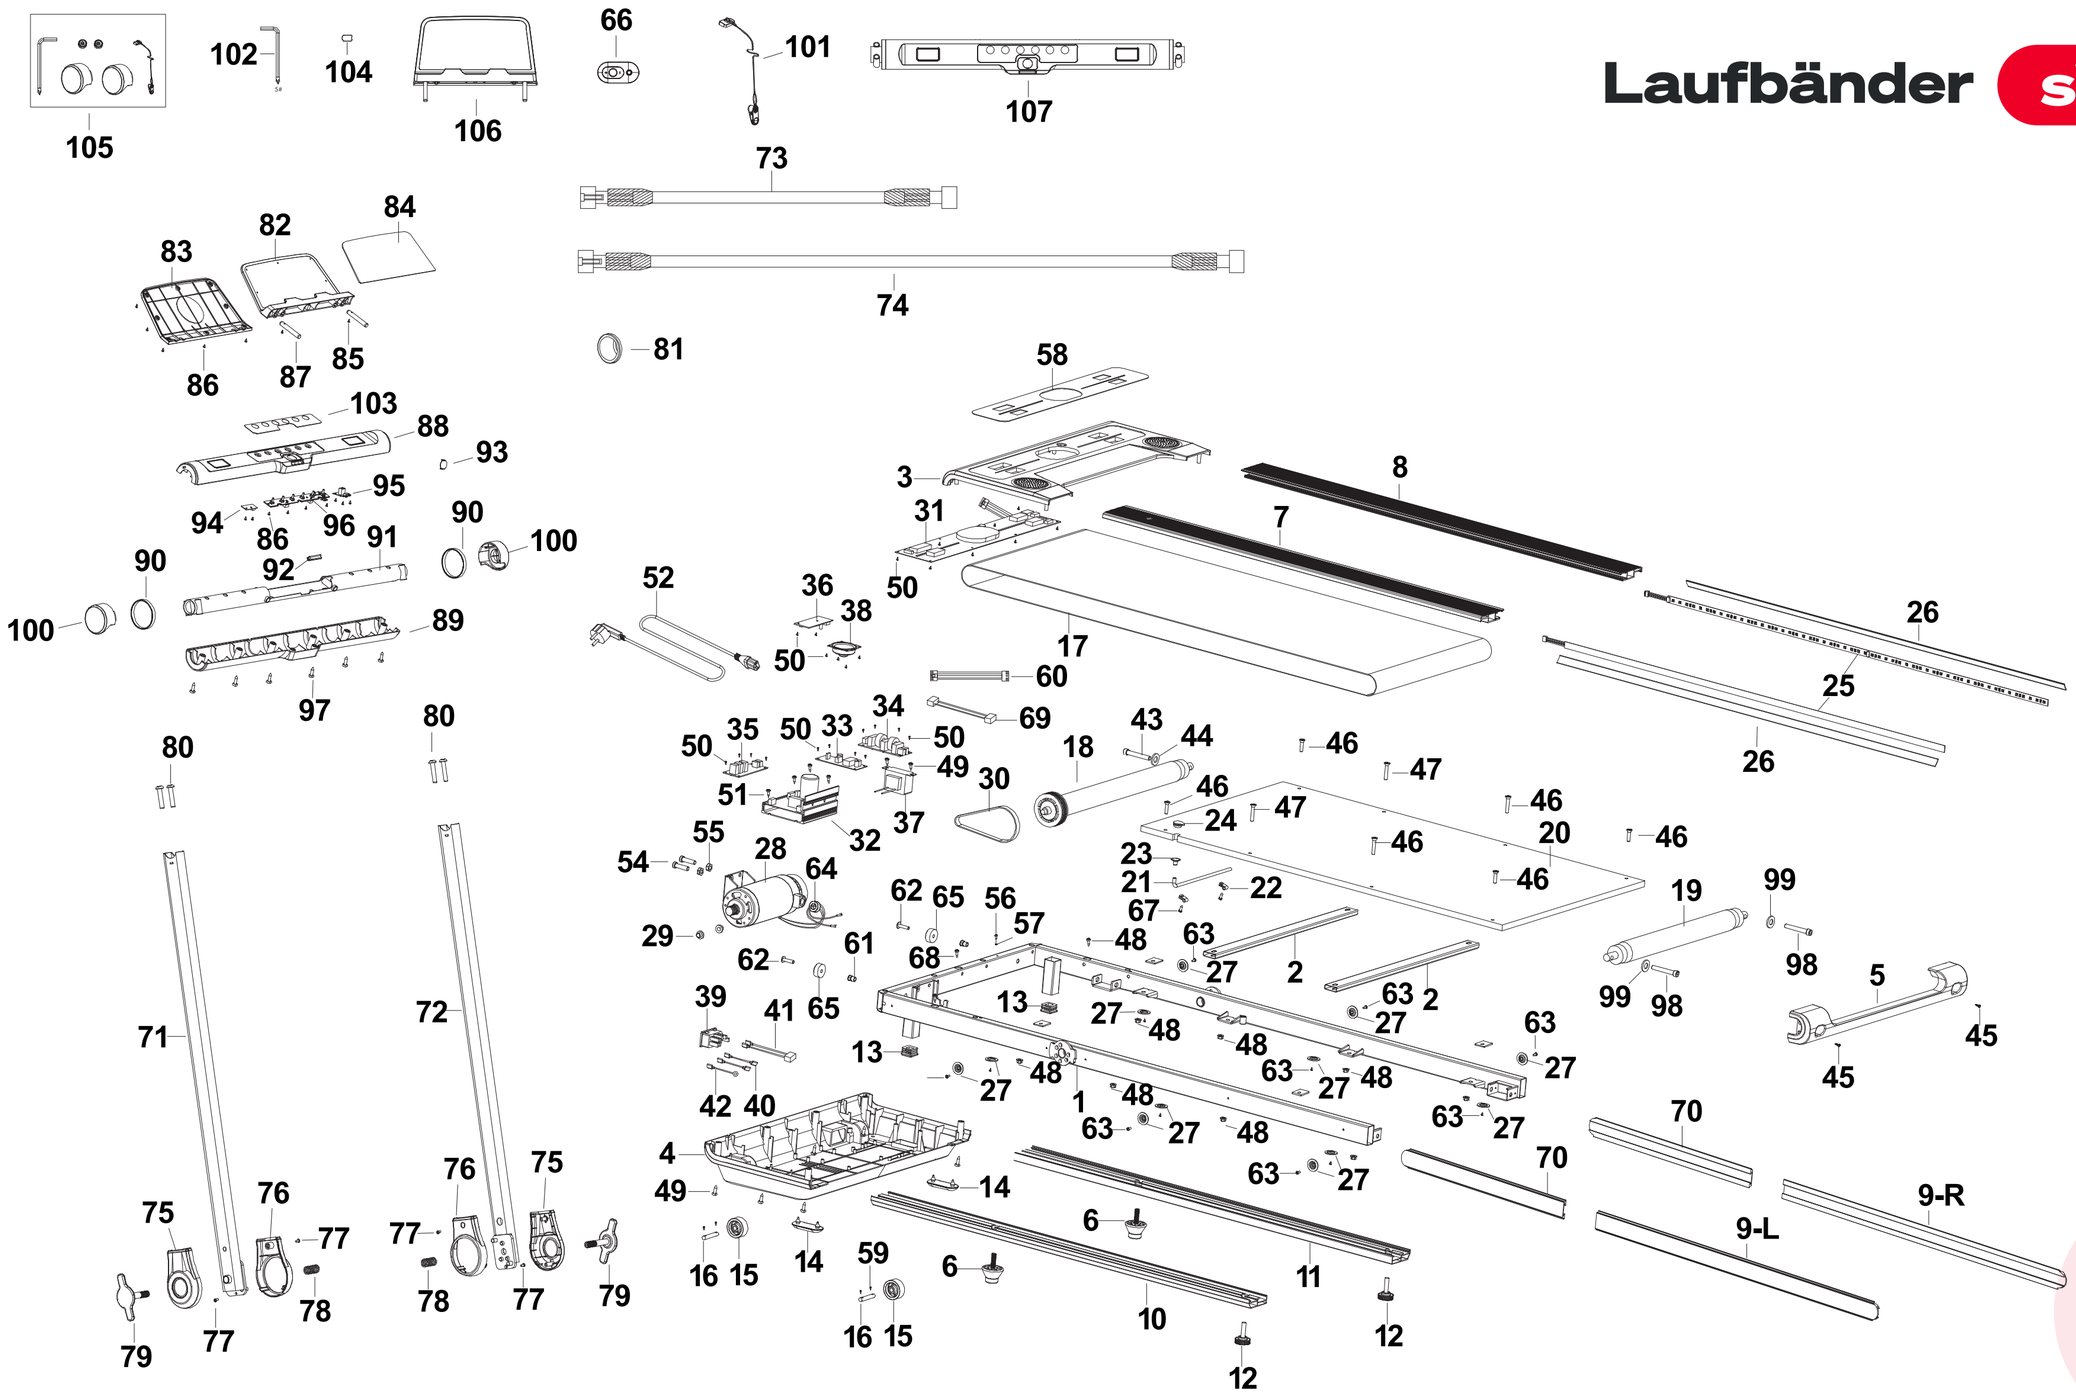

EXPLOSION-DRAWING / EXPLOSIONSZEICHNUNG

SPAREPARTS-OVERVIEW / ERSATZTEILLISTE

SPORTSTECH

Laufbänder sWalk Plus

No. in explosion drawing	Item No.	Description
1	SP_sWalk_Plus_01	Main Frame
2	SP_sWalk_Plus_02	Reinforced tube
3	SP_sWalk_Plus_03	Motor cover up
4	SP_sWalk_Plus_04	Motor cover down
5	SP_sWalk_Plus_05	End cover
6	SP_sWalk_Plus_06	High foot pad
7	SP_sWalk_Plus_07	Top left side rail
8	SP_sWalk_Plus_08	Top right side rail
9	SP_sWalk_Plus_09L	Left rear side rail
9	SP_sWalk_Plus_09R	Right rear side rail
10	SP_sWalk_Plus_10	Bottom left side rail
11	SP_sWalk_Plus_11	Bottom right side rail
12	SP_sWalk_Plus_12	Rear foot pad
13	SP_sWalk_Plus_13	Rectangular tube cap 25 x 25 mm
14	SP_sWalk_Plus_14	Motor cover foot pad
15	SP_sWalk_Plus_15	Transportation wheel
16	SP_sWalk_Plus_16	Transportation Wheel Shaft
17	SP_sWalk_Plus_17	Running belt
18	SP_sWalk_Plus_18	Front roller
19	SP_sWalk_Plus_19	Rear roller
20	SP_sWalk_Plus_20	Running board
21	SP_sWalk_Plus_21	Lubrication tube
22	SP_sWalk_Plus_22	R shape fastener
23	SP_sWalk_Plus_23	Lubrication connector
24	SP_sWalk_Plus_24	Lubrication cap
25	SP_sWalk_Plus_25	LED strip
26	SP_sWalk_Plus_26	LED Strip cover
27	SP_sWalk_Plus_27	Side rail fastner
28	SP_sWalk_Plus_28	Motor
29	SP_sWalk_Plus_29	Plastic bushing
30	SP_sWalk_Plus_30	Driving belt
31	SP_sWalk_Plus_31	Display board
32	SP_sWalk_Plus_32	Electric Controller
33	SP_sWalk_Plus_33	LED control board
34	SP_sWalk_Plus_34	EMI filter
35	SP_sWalk_Plus_35	LED power board
36	SP_sWalk_Plus_36	BT MP3 module
37	SP_sWalk_Plus_37	Choke
38	SP_sWalk_Plus_38	Speaker
39	SP_sWalk_Plus_39	Power switch
40	SP_sWalk_Plus_40	Wire for power switch
41	SP_sWalk_Plus_41	Wire for LED control board
42	SP_sWalk_Plus_42	Ground wire
43	SP_sWalk_Plus_43	Hexagon socket oval head bolt M8 x 55
44	SP_sWalk_Plus_44	Washer D8
45	SP_sWalk_Plus_45	Cross recessed oval head tapping screw ST4.2 x 16
46	SP_sWalk_Plus_46	Cross recessed truss head screw M6 x 25
47	SP_sWalk_Plus_47	Cross recessed truss head screw M6 x 35
48	SP_sWalk_Plus_48	Flangnut M6
49	SP_sWalk_Plus_49	Truss head tapping screw ST4 x 12
50	SP_sWalk_Plus_50	Cross recessed oval head tapping screw ST3 x 8
51	SP_sWalk_Plus_51	Truss head tapping screw ST3 x 8
52	SP_sWalk_Plus_52	Power cord
53	SP_sWalk_Plus_53	Display cable
54	SP_sWalk_Plus_54	Hexagon socket oval head bolt M8 x 30
55	SP_sWalk_Plus_55	Nylon nut M8

No. in explosion drawing	Item No.	Description
56	SP_sWalk_Plus_56	Cross recessed truss head screw M4 x 12
57	SP_sWalk_Plus_57	Spring washer D4
58	SP_sWalk_Plus_58	Overlay
59	SP_sWalk_Plus_59	Truss head tapping screw ST4 x 16
60	SP_sWalk_Plus_60	Main control cable
61	SP_sWalk_Plus_61	Rivet nut
62	SP_sWalk_Plus_62	Truss head screw M6 x 25
63	SP_sWalk_Plus_63	Truss head tapping screw ST4.2 x 16
64	SP_sWalk_Plus_64	Magnetic ring
65	SP_sWalk_Plus_65	Standup foot pad
66	SP_sWalk_Plus_66	Remote controller
67	SP_sWalk_Plus_67	Truss head tapping screw ST4 x 16
68	SP_sWalk_Plus_68	Truss head tapping screw ST4 x 16
69	SP_sWalk_Plus_69	Wire for EMI filter
70	SP_sWalk_Plus_70	Left front side rail
71	SP_sWalk_Plus_71	Left supporting tube
72	SP_sWalk_Plus_72	Right supporting tube
73	SP_sWalk_Plus_73	Lower main control cable
74	SP_sWalk_Plus_74	Upper main control cable
75	SP_sWalk_Plus_75	Outer suppoting tube cover
76	SP_sWalk_Plus_76	Inter supporting tube cover
77	SP_sWalk_Plus_77	Cross recessed oval head tapping screw ST4 x 12
78	SP_sWalk_Plus_78	Spring D16.2 x D12.8
79	SP_sWalk_Plus_79	Locking knob
80	SP_sWalk_Plus_80	Hexagon Socket Oval Head Bolt M8x40
81	SP_sWalk_Plus_81	Cable grommet
82	SP_sWalk_Plus_82	Tablet holder housing upper
83	SP_sWalk_Plus_83	Tablet holder housing bottom
84	SP_sWalk_Plus_84	Tablet holder EVA
85	SP_sWalk_Plus_85	Cross recessed truss head screw M4 x 10
86	SP_sWalk_Plus_86	Cross recessed oval head tapping screw ST3 x 8
87	SP_sWalk_Plus_87	Tablet holder housing bolt
88	SP_sWalk_Plus_88	Console upper
89	SP_sWalk_Plus_89	Console bottom
90	SP_sWalk_Plus_90	Decorative ring
91	SP_sWalk_Plus_91	Handle frame
92	SP_sWalk_Plus_92	Anti-Touch rubber
93	SP_sWalk_Plus_93	Safety key housing
94	SP_sWalk_Plus_94	Safety key board
95	SP_sWalk_Plus_95	Folding control board
96	SP_sWalk_Plus_96	Console key board
97	SP_sWalk_Plus_97	Truss head tapping screw ST4 x 12
98	SP_sWalk_Plus_98	Hexagon socket oval head bolt M6 x 55
99	SP_sWalk_Plus_99	Washer D6
100	SP_sWalk_Plus_100	Console cover
101	SP_sWalk_Plus_101	Safety key
102	SP_sWalk_Plus_102	Allen key
103	SP_sWalk_Plus_103	Console overlay
104	SP_sWalk_Plus_104	Safety key sticker
105	SP_sWalk_Plus_105	Hardware kit
106	SP_sWalk_Plus_106	Complete tablet holder
107	SP_sWalk_Plus_107	Complete console
108	SP_sWalk_Plus_Carton	Carton
109	SP_sWalk_Plus_Manual	Manual
110	SP_sWalk_Plus_Screw set	Screw set