EXPLOSION-DRAWING / SPAREPARTS-OVERVIEW
EXPLOSIONSZEICHNUNG / ERSATZTEILLISTE

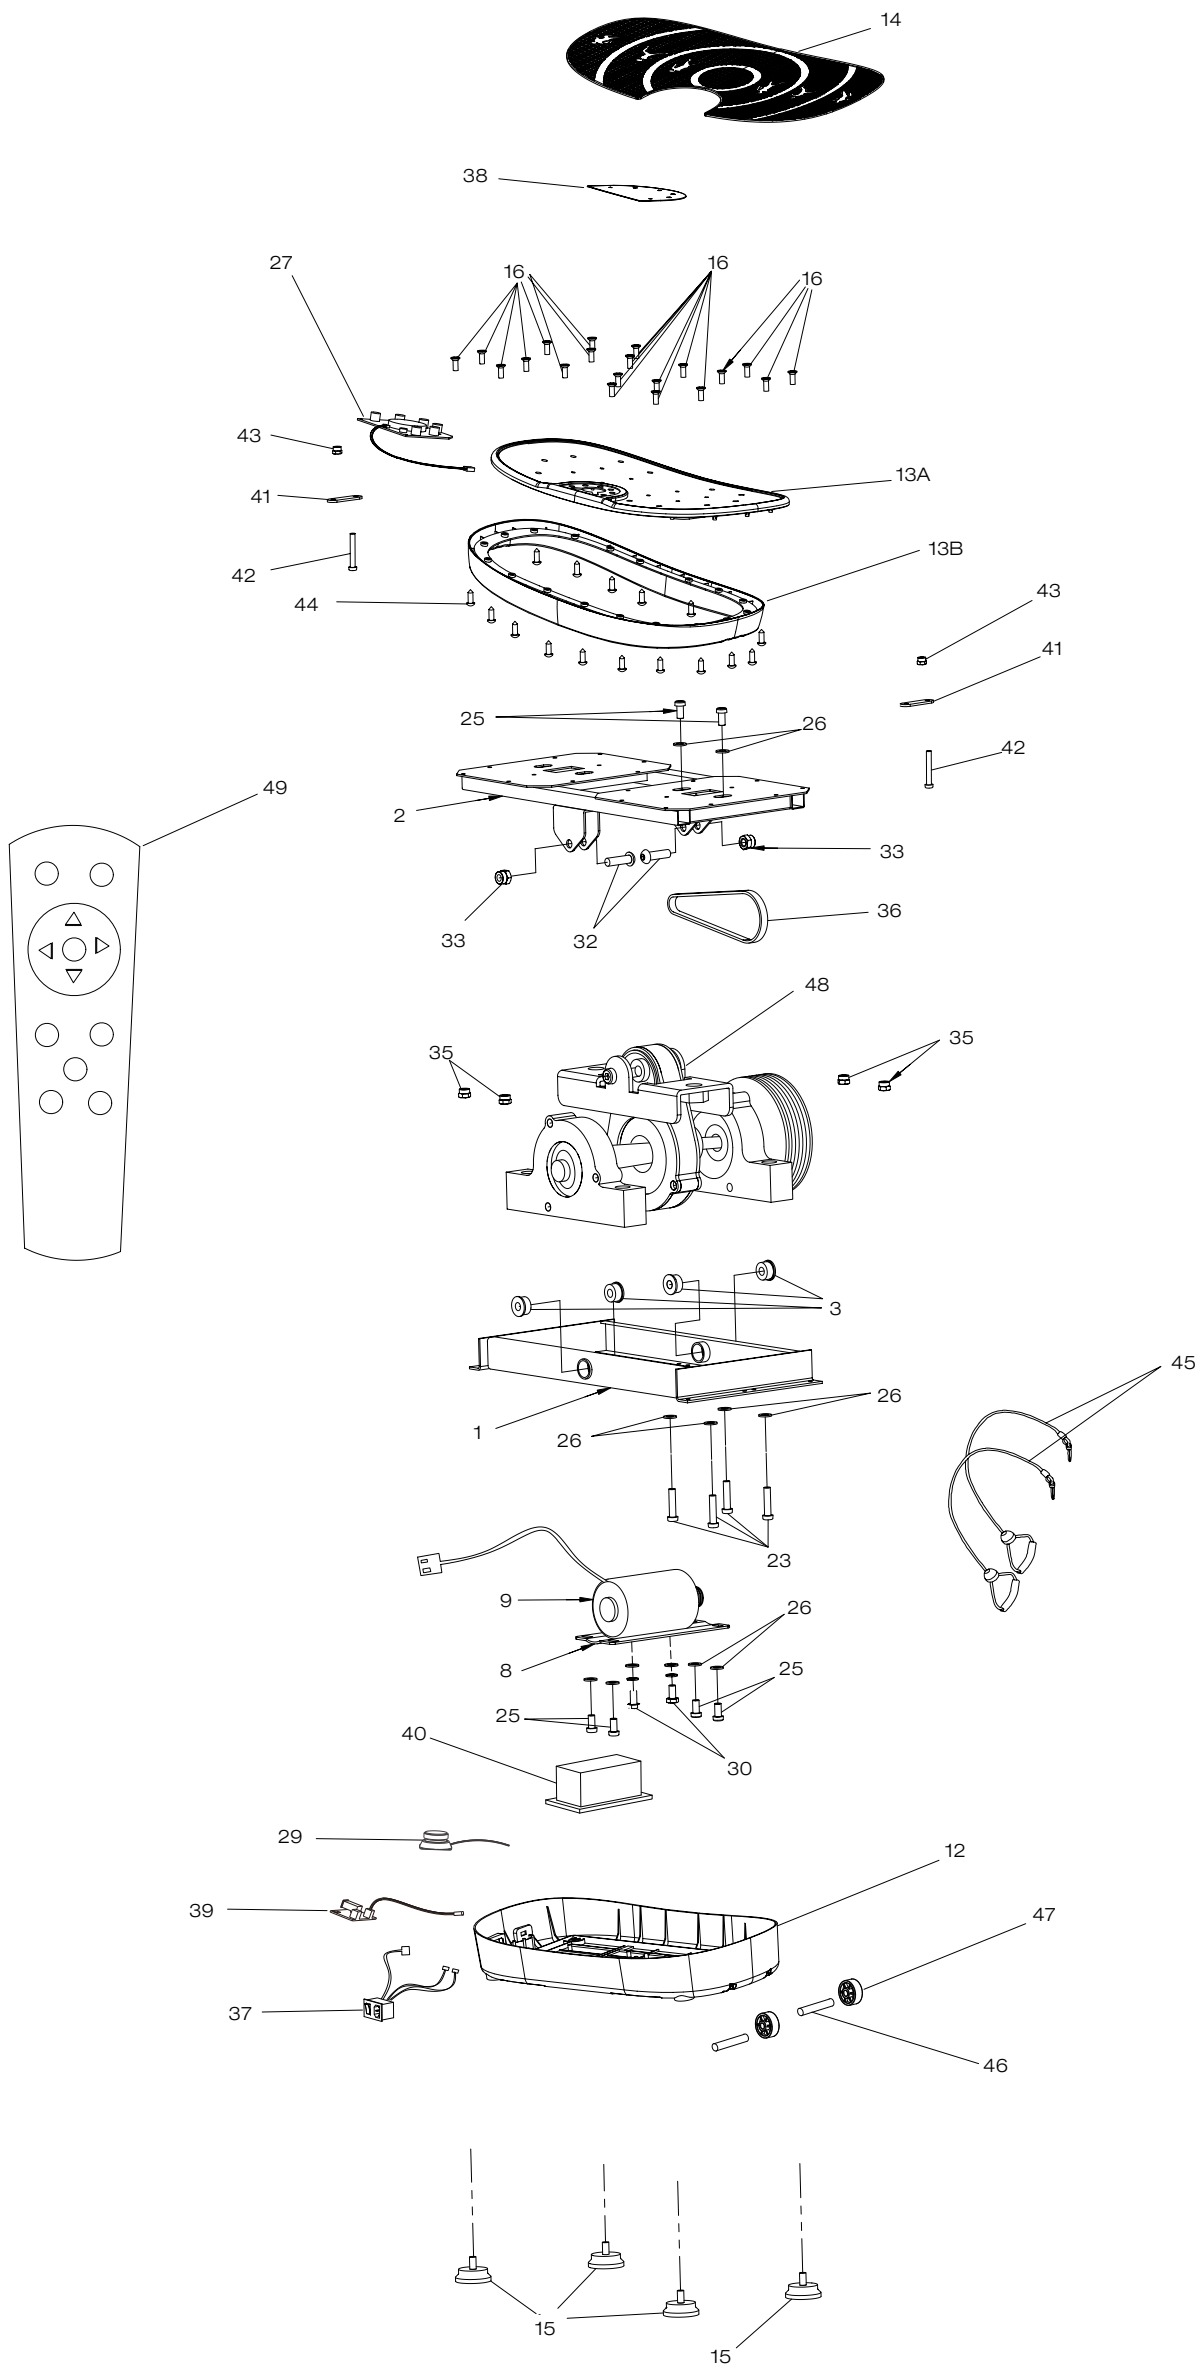

SPORTSTECH

VIBRATION PLATE VP250
VIBRATIONSPLATTE VP250

Number in explosion drawing	Item number	Description
1	SP_VP250_01	Bottom steel skeleton
2	SP_VP250_02	Pedal skeleton
3	SP_VP250_03	Centre shaft bush
8	SP_VP250_08	Motor fixing part
9	SP_VP250_09	Motor
12	SP_VP250_12	Bottom cover
13	SP_VP250_13A	Cover top
13	SP_VP250_13B	Cover middle
14	SP_VP250_14	Foot pad
15	SP_VP250_15	Feet
16	SP_VP250_16	Screw
23	SP_VP250_23	Screw M8x30
26	SP_VP250_26	Flat washer M8
27	SP_VP250_27	Display board
29	SP_VP250_29	Speaker
30	SP_VP250_30	Screw M8x16
32	SP_VP250_32	Screw M10x35
33	SP_VP250_33	Nut M10

Number in explosion drawing	Item number	Description
35	SP_VP250_35	Nut M8
36	SP_VP250_36	Belt
37	SP_VP250_37	Switch and socket
38	SP_VP250_38	Display sticker
39	SP_VP250_39	Audio PCB
40	SP_VP250_40	PCB box
41	SP_VP250_41	Strap hooker
42	SP_VP250_42	Screw M6x35
43	SP_VP250_43	Nut M6
44	SP_VP250_44	Self tapping screw ST4x16
45	SP_VP250_45	Exercise rope
46	SP_VP250_46	Axis M6x30
47	SP_VP250_47	Rolling wheel
48	SP_VP250_48	Shaft complete
49	SP_VP250_49	Remote control
Not in drawing	SP_VP250_Carton	Carton
Not in drawing	SP_VP250_Manual	Manual
not in drawing	SP_VP_Poster	Training poster